


# BACKFLOW PREVENTION CATALOGUE

## 4A-200 RPZ Repair Kits

### 4A-200 RPZ CONBRACO

Size	15mm	20mm	25mm	32-40mm	50mm
<b>Check Rubber Repair Kit (x1)</b> 6, 7, 20	4A00301	4A00401	4A00501	4A00701	4A00801
<b>1st Check Complete Kit</b> 6, 7, 14	4A00303	4A00403	4A00503	4A00703	4A00803
<b>2nd Check Complete Kit</b> 6, 7, 15	4A00302	4A00402	4A00502	4A00702	4A00802
<b>Relief Valve Complete Kit</b> 10, 11, 12, 13, 16	4A00505	4A00505	4A00505	4A00705	4A00805
<b>Rubber Repair Kit</b> 6 (2), 7 (2), 10, 11, 13, 20 (2), 29, 31	4A00309	4A00409	4A00509	4A00709	4A00809
<b>Major Repair Kit</b> 6 (2), 7 (2), 10, 11, 12, 13, 14, 15, 16	4A00310	4A00410	4A00510	4A00710	4A00810

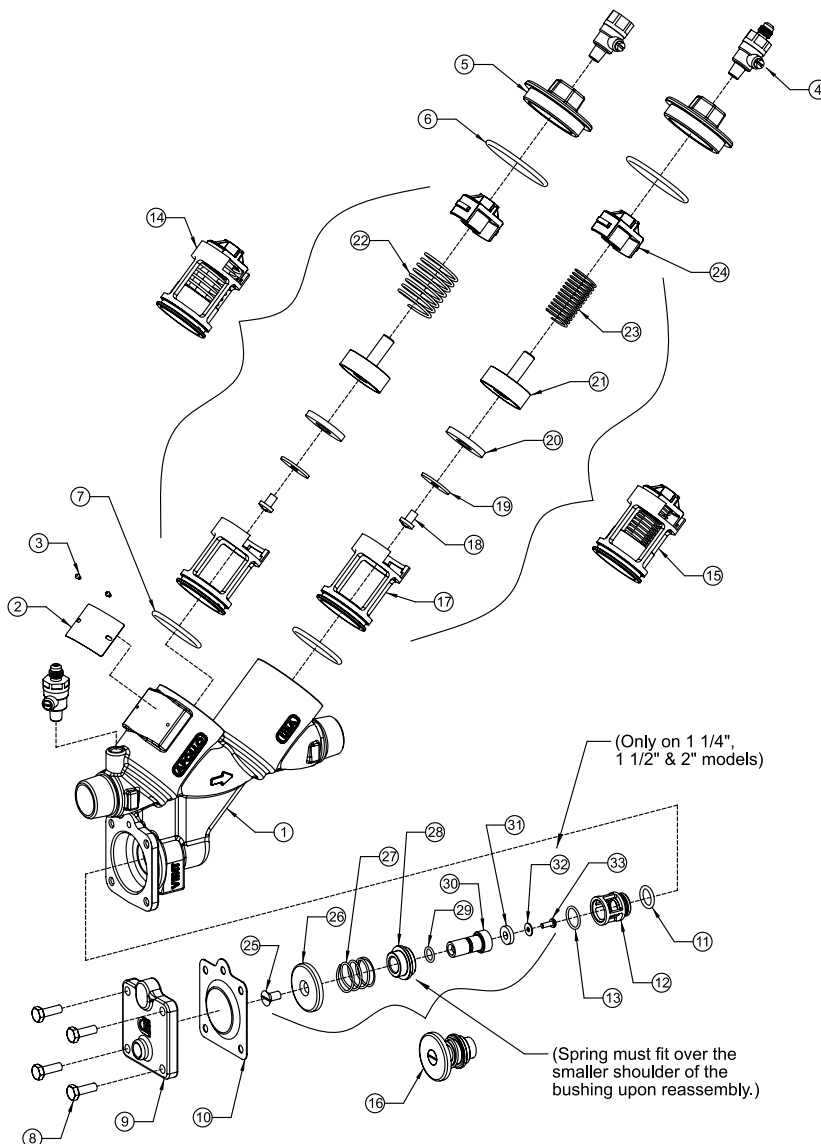

1	Body
2	Label Plate
3	Label Plate Tacks
4	Test Cock
5	Cap
6	Cap O-Ring
7	Check Module O-Ring
8	RV Cover Bolts
9	RV Cover
10	RV Diaphragm
11	RV Seat O-Ring
12	RV Seat
13	RV Bushing Face O-Ring
14	<b>1st Chk Sub Assembly</b>
15	<b>2nd Chk Sub Assembly</b>
16	<b>RV Sub Assembly</b>
17	Check Seat
18	Screw
19	Disc Retaining Washer
20	Seat Disc
21	Poppet
22	Spring 1st Check
23	Spring 2nd Check
24	Spring Retainer
25	RV Diaph. Plate Screw
26	RV Diaphragm Plate
27	RV Spring
28	RV Bushing (Standard)
29	RV Stem O-Ring
30	RV Stem
31	RV Seat Disc
32	RV Seat Disc Washer
33	RV Seat Disc Screw